


Tools: Phillips screwdriver
5/32" Allen-wrench

People Required: 1 Person

Time: 5 Minutes



1. To remove the seat, access the underside and locate and remove all 4 (5/32") Allen-head bolts.

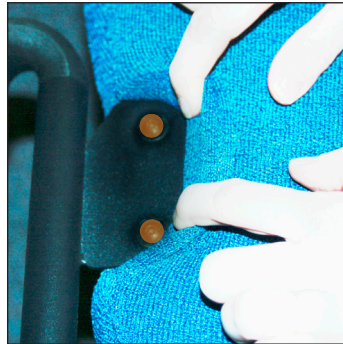

2. To remove the fully upholstered backrest, locate the 4 (5/32") Allen-head bolts where the frame attaches to the backrest. You'll need to pull back the edge of the upholstery on the outer shell to access those bolts. Remove the 2 bolts on each side of the backrest.



3. Replace seat and/or backrest, or reinstall original pieces to new frame using same Allen-head bolts in reversed order. Always start bolts by hand, being careful not to cross-thread.